


Correcting the trailer for skewed boat recovery


If boat consistently ends up to one side when winching onto trailer it is almost certainly the rear rollers, on the swinging cradle, that are to blame. Shown exaggerated here, the rollers are mounted twisted which causes the boat to roll on in that direction.

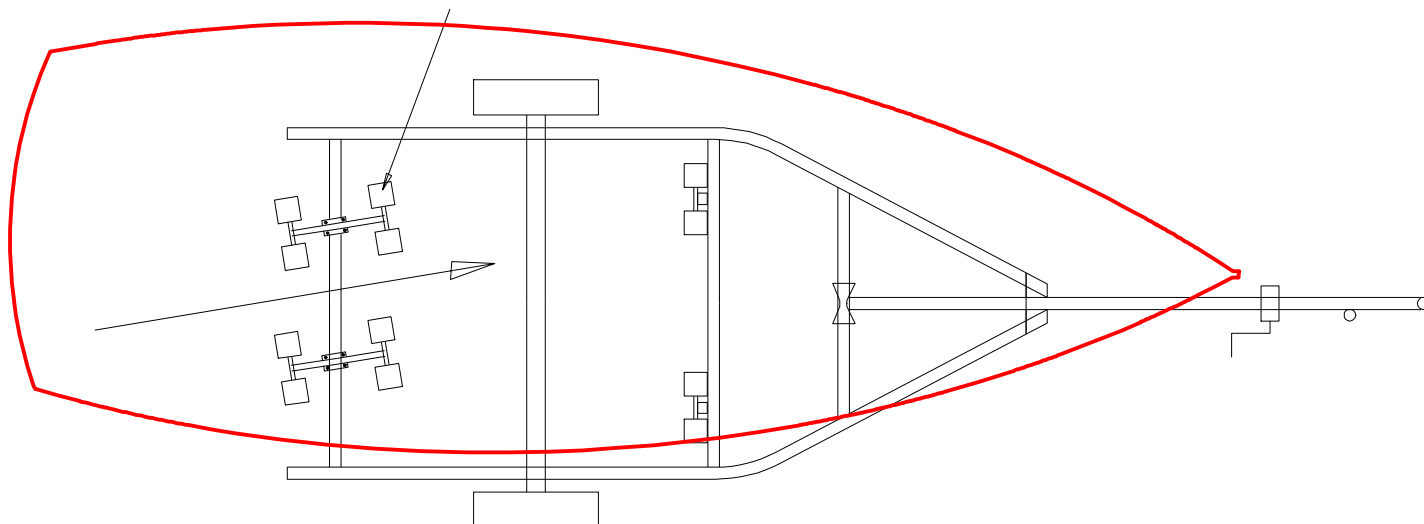

Solution:

It is easiest to do this with the boat off the trailer. If this is impossible, then stick a strong trestle under the stern and wind up the jockey wheel. This will take the weight off the rear rollers (make sure any straps are loose), so they can be adjusted.

Loosen off the four nuts holding each roller set. Force rotate the roller set and tighten. Some trial and error may be needed.

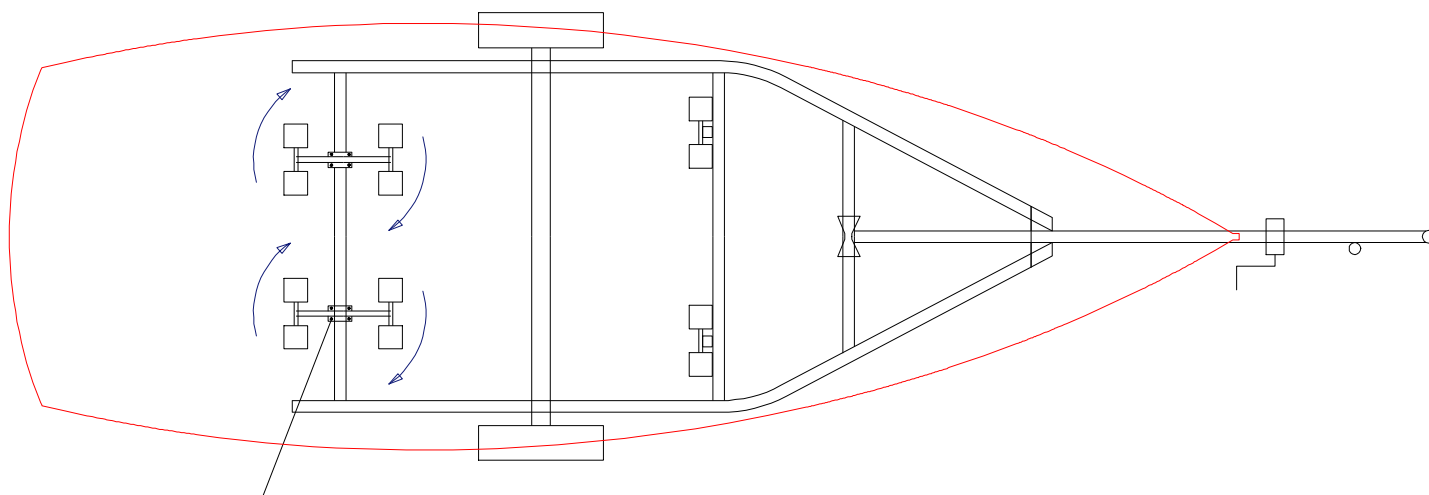

Loosen these bolts and rotate roller set in opposite direction from that which the boat was skewed.